

Installation Instructions for Exterior Kits for Porsche Cayenne 958.1–958.2 - CBPOCY6

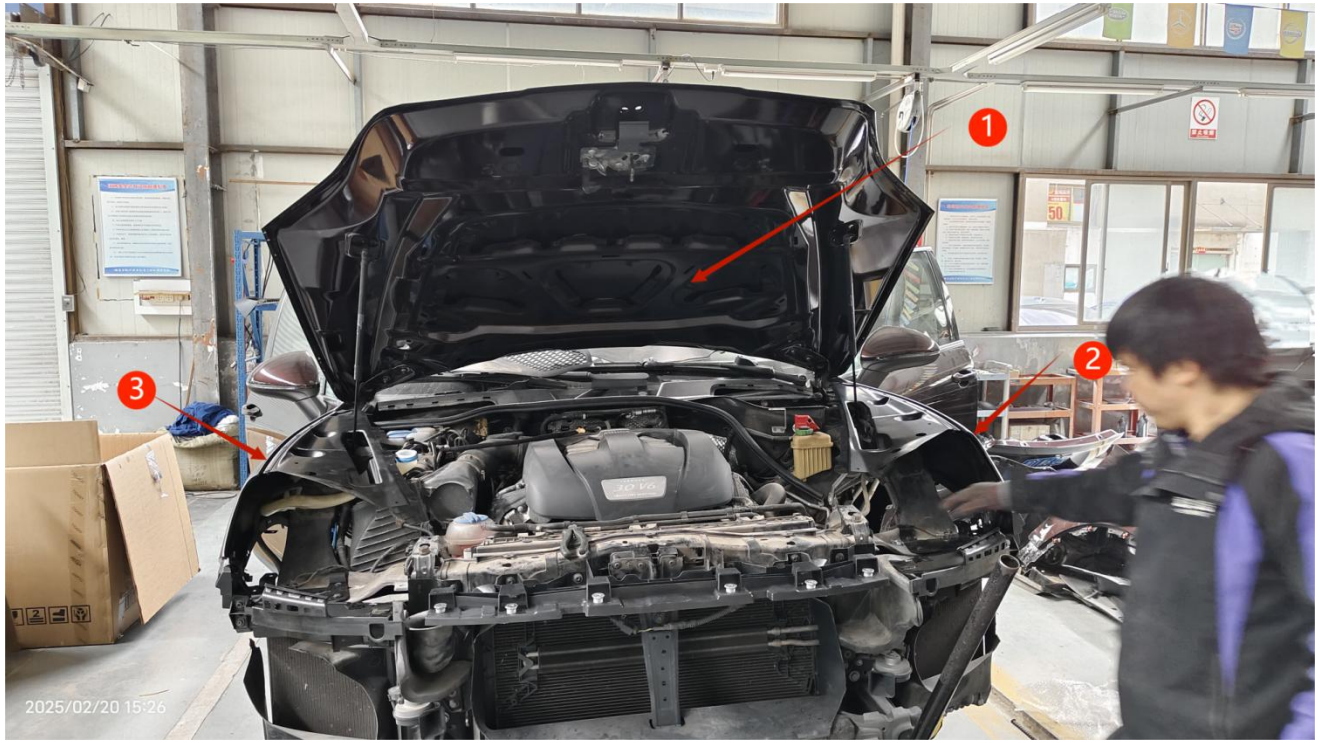

- 1: Install the hood
- 2: Install the front left fender
- 3: Install the front right fender




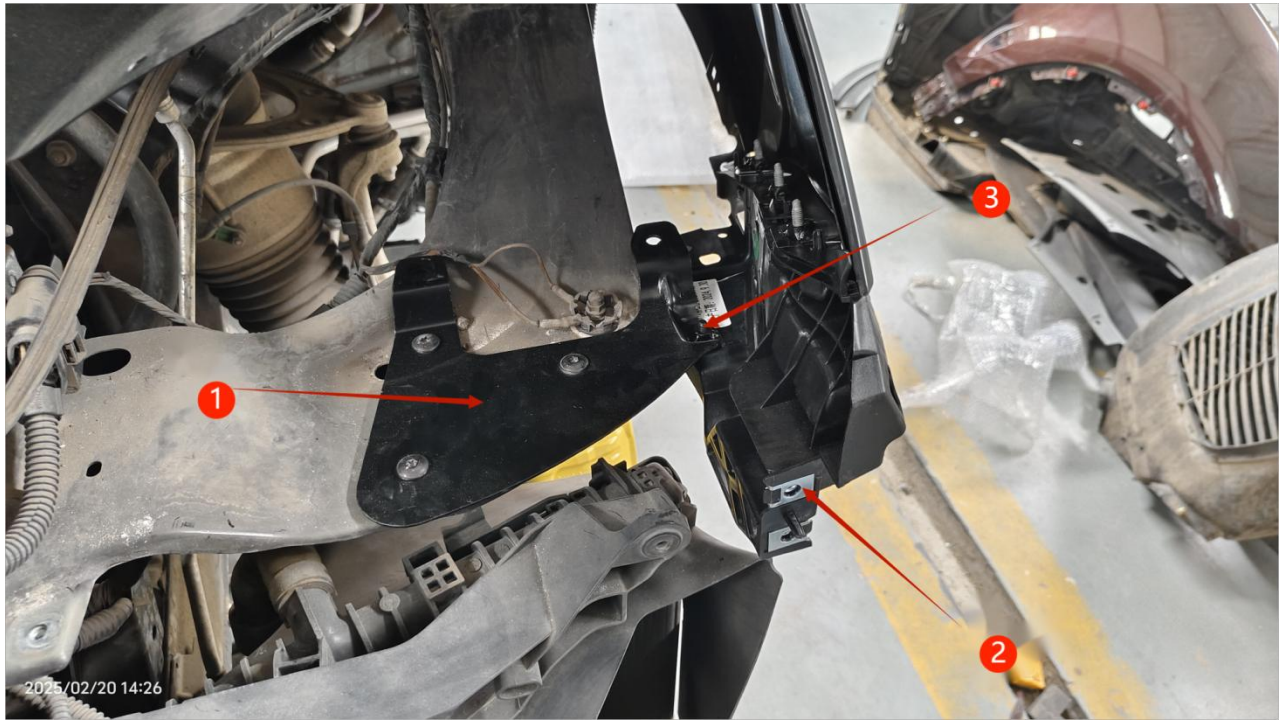

- 1: Install the mounting attachment at the rear of the headlight.
- 2: Install the outer side of the front bumper bracket (as shown in the image).



- 3： Secure the connection at positions 1 and 2.

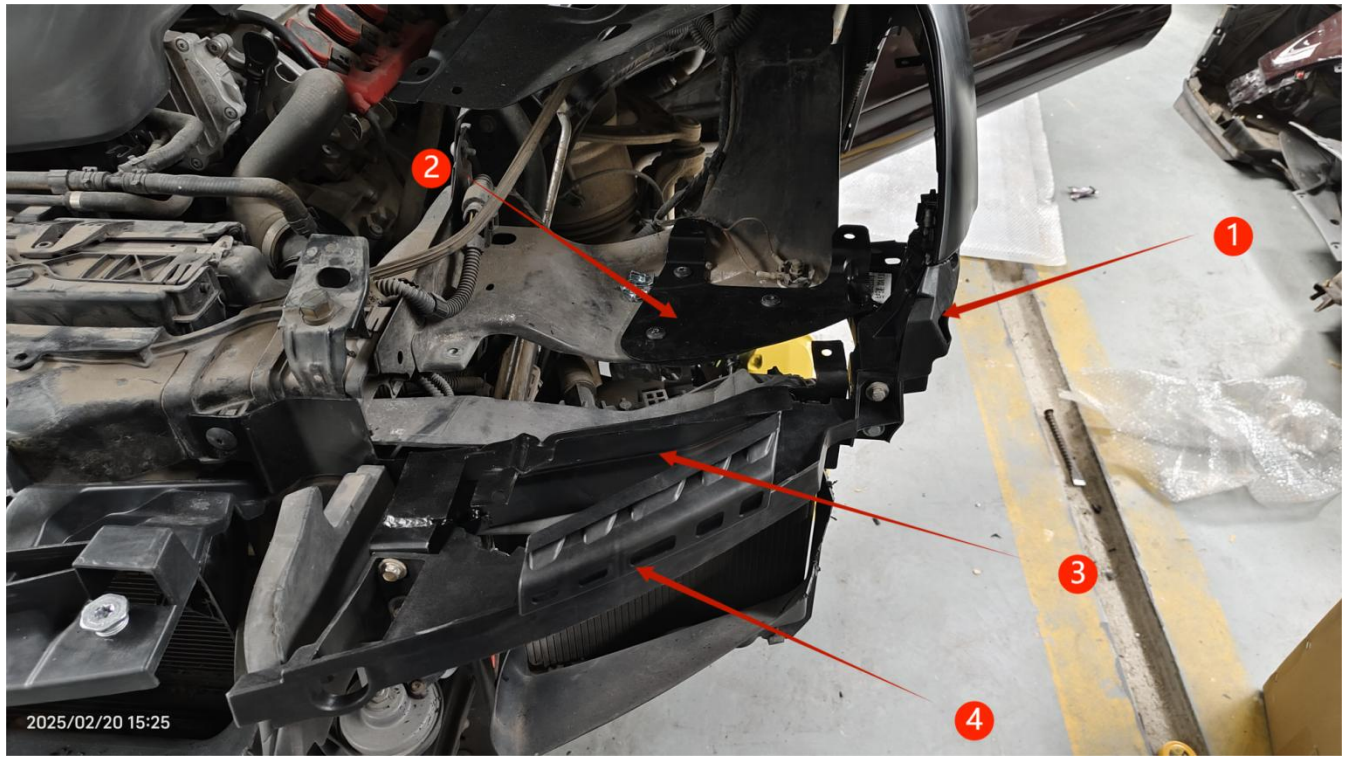


- 1: Install the fender
- 2: Install the mounting bracket at the rear of the headlight
- 3: Install the mounting hardware at the front of the headlight
- 4: Install the inner left and right brackets for the front bumper





1： Adjust the height of the bumper and the gap between it and the hood.


2: Install the center bracket for the front bumper

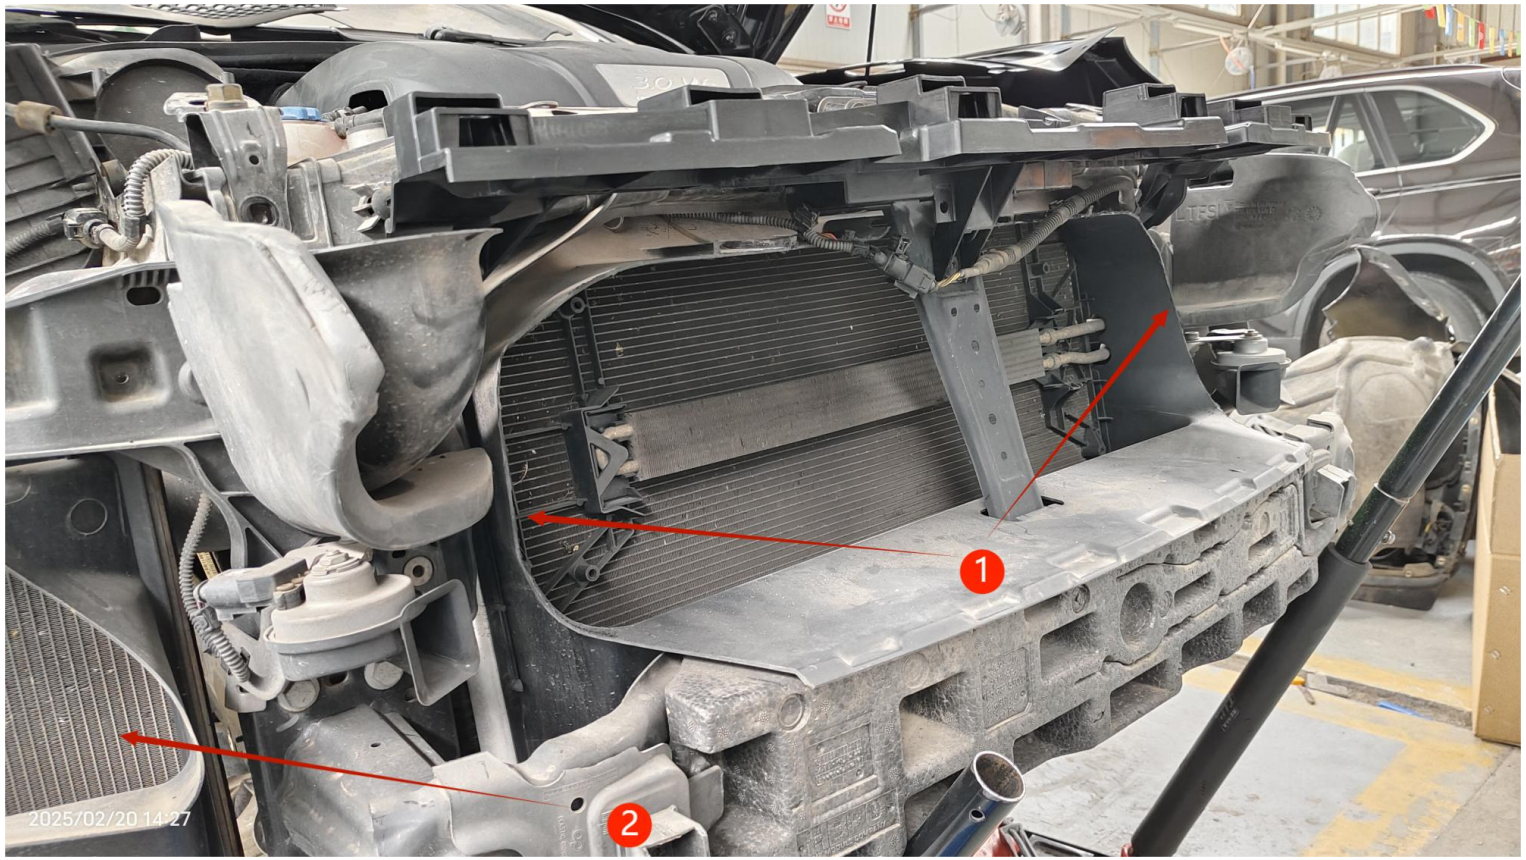


- 1: Some material needs to be trimmed from both ends of the original vehicle; it is best to compare it with the new front bumper before cutting away any parts that cause interference.
- 2: Remove the original vehicle's air intake shroud.




- 1: Install front bumper radar

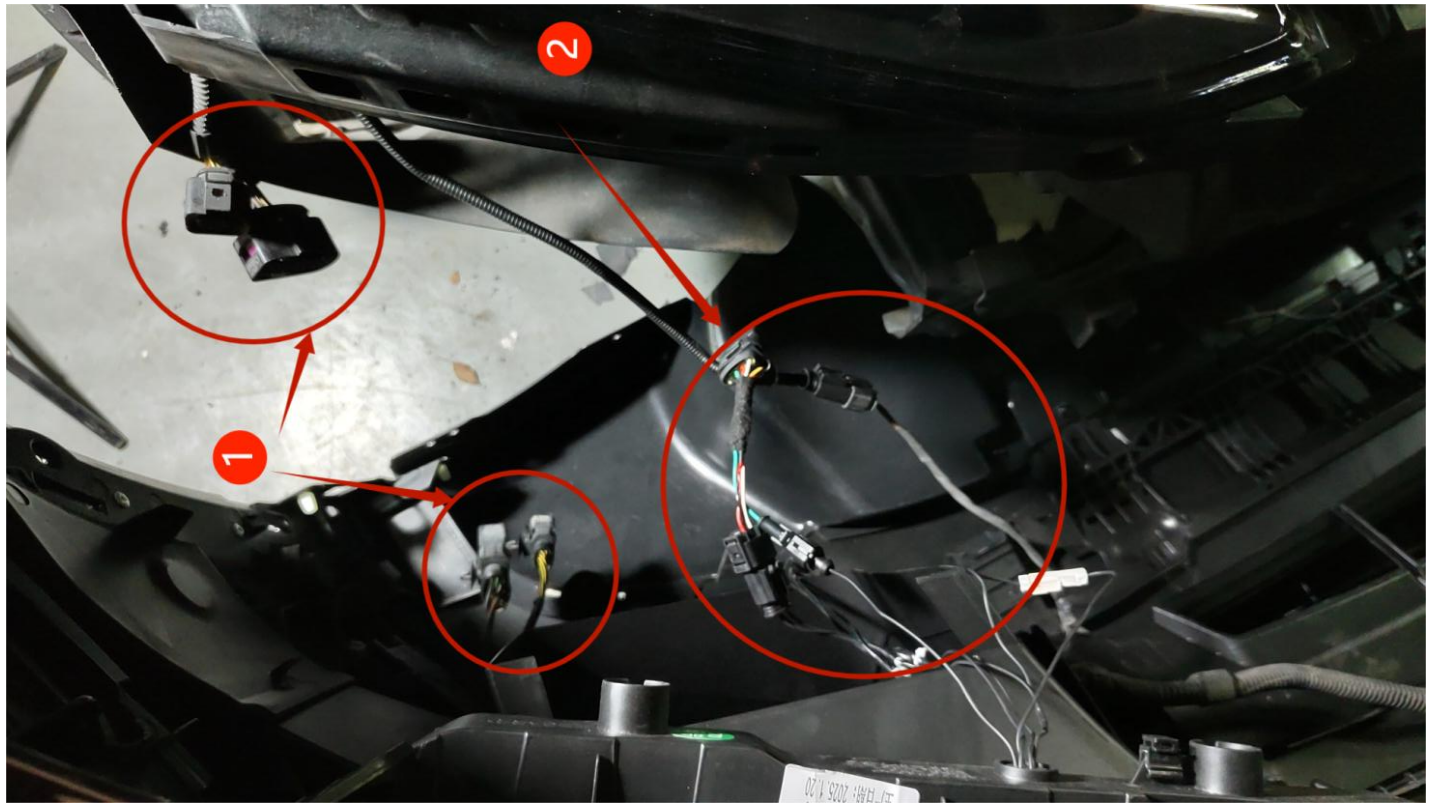

- 1: Direct connection (plug-in)
- 2: Connection via adapter cable

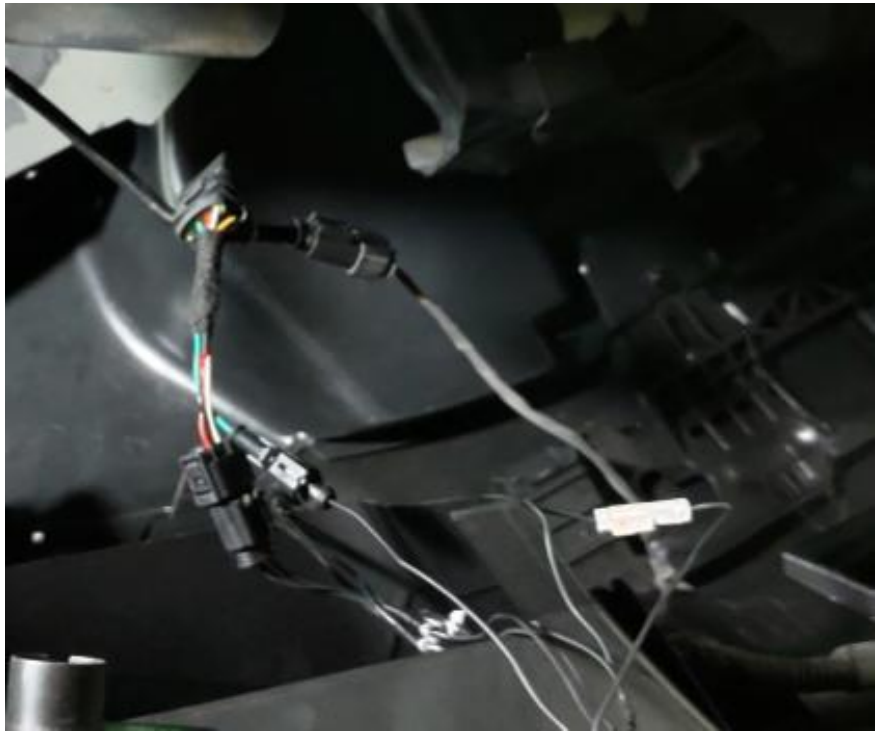

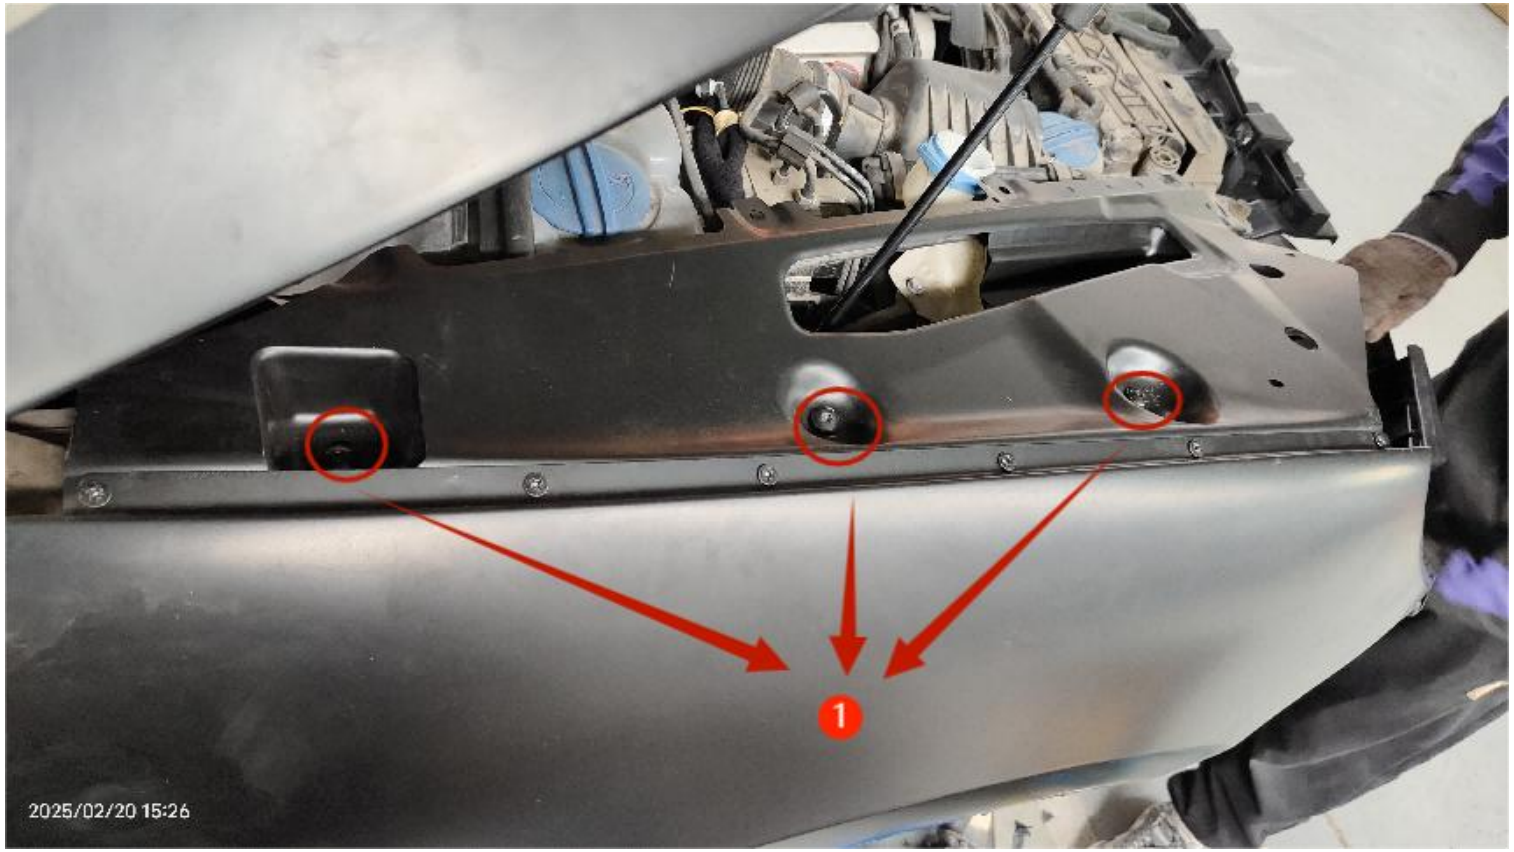



- 1: The fender features slotted (oblong) mounting holes, which facilitate the adjustment of the gap between the fender and the hood.



- 1: Install the headlights
- 2: Install the front cover panel



- 1: Remove these two brackets from the original vehicle.





- 1: Install the tailgate
- 2: Install the full-width light bar



- 1: Install the main bracket for the curved light
- 2: Install the curved light
- 3: Install the supplementary components for the curved light


2025/02/21 09:37



- 1: Install the rear bumper
- 2: Install the original vehicle glass
- 3: Install the rear wiper
- 4: Install the rear spoiler
- 5: Install the exhaust tip



Disclaimer: Our company is not responsible for any related problems and losses caused by improper installation and use.